

UbiBot® On-Premises Platform Pre-sale Notice



1. Server Configuration

① Windows

Configuration	Recommended	Minimum
	Configurations	Configuration
Number of devices	100	20
Operating System	Windows Server 2019+	Windows Server 2019+
(64bit only)	/Windows10+	/Windows10+
Installation & Running	Pure system	Pure system
Environment		
CPU	Quad-core+, 2GHz+	Quad-core+, 1GHz+
Memory	8G	4G
HDD	50G (SSD)	10G
NIC	100M+ (Ethernet)	10M+

^{*} Note: For every additional 50 devices, add 1 CPU core, 2 GB of memory, and 50 GB of storage. For example, for 200 devices, the configuration should be 6 cores, 12 GB of memory, and 150 GB of storage.

2 Linux

Configuration	Recommended	Minimum
	Configurations	Configuration
Number of devices	100	20
Operating System	x86-based Linux / FreeBSD	x86-based Linux / FreeBSD
(64bit only)	system with Docker support	system with Docker support
Installation & Running	Pure system	Pure system
Environment		
CPU	Dual-core+, 2GHz +	Single-core+, 1GHz +
Memory	4G	1G
HDD	50G (SSD)	10G
NIC	100M+ (Ethernet)	10M+



* Note: For every additional 50 devices, add 1 CPU core, 1 GB of memory, and 50 GB of storage. For example, for 200 devices, the configuration should be 6 cores, 6 GB of memory, and 150 GB of storage.

2. Obtain the local IP address of the server

- ① Press Win+R, enter "cmd" and click [OK].
- 2 Enter "ipconfig" and record the IP address.

```
ACCOMMONOMORPHICADOR CO.

LIVER COMPANY AND ACCOMMENTATION

C. Waters MUNI Incomfig

Finders IT Configuration

Sthermet adapter UALPH:

Media State


Connection-specific DNS Deffix

Link-local Pick Address


Link-local Pick
```

3. Download framework and key

Open UbiBot App Center (https://www.ubibot.com/appcenter/) , you need to use UbiBot account to login and select the corresponding plan, click [Try it now].

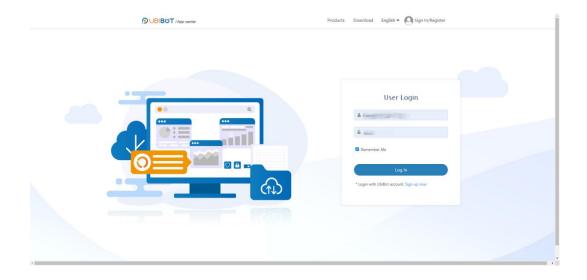




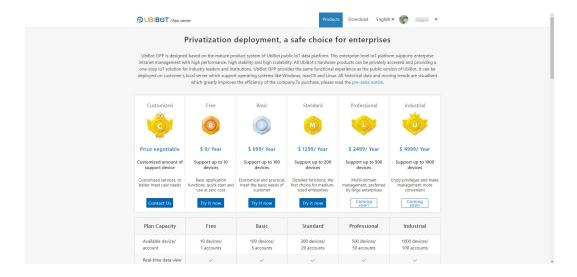

2 Enter the order information page, fill in product-related information and select the plan, click **[Next]**.


For public network use, please make sure the domain name and IP address can be accessed on the public network. For internal LAN use, please confirm the IP address of the server to be deployed, see the above section for the method of obtaining the server IP. Both domain name and IP address can be filled in IP.

Note: The domain name must be less than 32 bits.

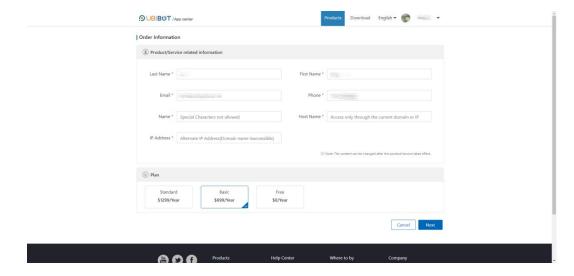


3 Confirm purchase information and make payment. If you have a coupon, please enter the coupon code first.



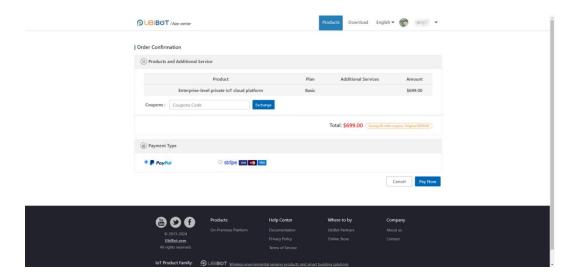

4 After the purchase is completed, click [My Order] - [Product Service] to enter the All Services page.

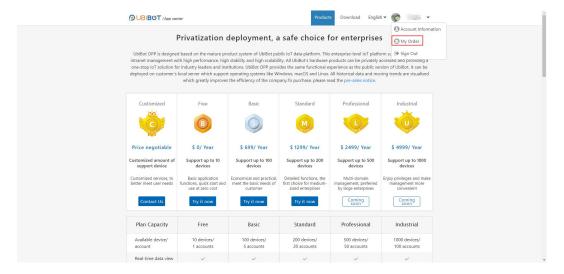

Click [Framework], [Key] and [Doc] to download the installation zip file, key file and deployment documents respectively.



